 
 


Technician Settings

Adjust the Open/Close time for the motor.

The Open/Close time of the motor can be adjusted by the technician, according to the motor specifications. Adjustable range: 10-400 seconds, Default 60 seconds. Use DIP switch S1.4 to switch between normal mode and technician mode.

- Move DIP switch S1.4 to ON position.
- Adjust the Open/Close time using the [+] or [-] buttons according to the following equation:
Time (seconds) = (1 ÷ 40) X 10 example: 30 → 30 X 10 = 300 seconds.
- Move DIP switch S1.4 back to OFF position.

 


Internal / External sensor.

Use DIP Switches S1.1, S1.2 and S1.3 to select between Internal and External sensor configuration as follows:

Internal sensor (default): S1.1, S1.3 – ON, S1.2 – OFF

External sensor: S1.1, S1.3 – OFF, S1.2 – ON



Offset for calibration of measured temperature

- Adjust the set point temperature to 10°C.
- Press and hold the [Mode] button for more than 15 seconds.
- Adjust the offset using the [+] and [-] buttons – range (-6)...(+6)°C.
- Press the [Mode] button again to return to normal display.

Note:

- DIP Switches 5 and 6 are not in use (OFF position)
- The two jumpers standing on the left side of the DIP switch must be in Pos.1 – two upper legs short

Operating Manual

On/Off

- Press the [On/Off] button to activate or deactivate the thermostat. The words "ON" or "OFF" will appear on display.

Set point temperature

- Press the [+] or [-] buttons – the set point temperature will flash.
- Adjust the set point temperature using the [+] or [-] buttons.

Modes

- Press the [Mode] button to switch between modes:
 - Cool – "Cool" will appear on display. "Cool" will flash when cooling active.
 - Heat – "Heat" will appear on display. "Heat" will flash when heating active.
 - Auto change-over – "Cool" and "Heat" will appear on display. The active mode will flash.

Fan speeds

- Press the [Fan] button to switch between modes:
 - Low speed – "Lo" will appear on display.
 - Medium speed – "Me" will appear on display.
 - Hi speed – "Hi" will appear on display.
 - Auto speed – "Lo", "Me" and "Hi" will appear on display. The active speed will flash.

meitav-tec

Tel: +972-3-9626462
Fax: +972-3-9626620
email: support@meitavtec.com

Title: **ETN24-PM2-3S**

Date: 16.02.09

			Print name: ETN24-PM2	Drawn: P.Rechtman
3	New print: ETN24-PM2 Rev.B	16.02.09	Software: EPM2S36	Checked: Y.Podkovirin
2	Print: ETN24-PM-3S-3H	25.06.07	Checksum: F5D8	Approved: E.Roy
1	Original	25.04.05	File name: etn24-pm2-3s.vsd	