

PS 2500-3S-FC-Super-Native BACnet Protocol



Main Controller All-IN-ONE™
Fan-Coils with ON/OFF outputs
for Cool and Heat valves,
with Native BACnet Protocol

General

The PS 2500-3S-FC-SUPER is a main controller for Fan coils applications with BACnet Protocol.

The PS 2500-3S-FC-SUPER has most of the applications built-in, field selectable. This flexibility gives the customers the advantage of having one main controller for most of Fan coils applications.

The PS 2500-3S-FC-SUPER has a modular and modern design for the high requirements of the market today.


The PS 2500-3S-FC-SUPER is factory pre-programmed to save valued time on field programming.

Features

- All-In-One system for Fan Coil applications
- Main Input- 220Vac
- Applications with jumper selection:
 - 2-pipe systems
 - 4-pipe systems
 - no valves system
- ON/OFF output for Cool and Heat valves- 220Vac
- Auto-change over sensor (Mode is set based on temperature of the incoming water flow, ideal for 2pipe systems)
- Discharge sensor- option (2-pipe systems)
- 3 Speeds output- 220Vac, 3Amp each- with Auto Speed function
- Indoor coil sensor for Heat (soft-start)
- Surface and flush mount thermostats- option
- Fault input dry contact, voltage-free, for occupancy sensor, window contact or fault input
- Occupancy sensor- option with 12Vdc supply



PS 2500-3S-FC-Super Native BACnet

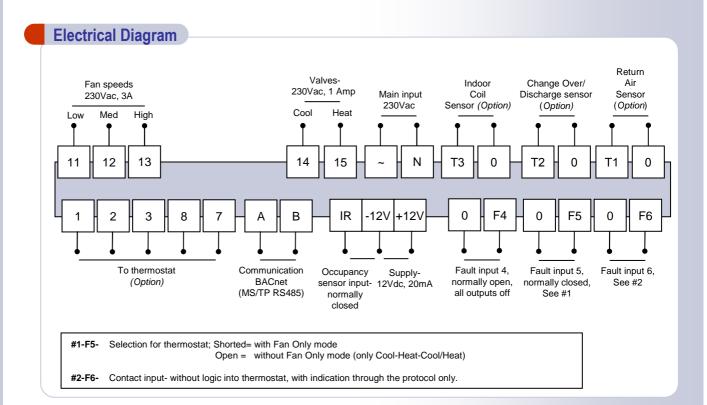

Dimensions

Length	157mm	
Width	90mm	
Height	40mm	

Specifications

Temperature Range	10÷30℃		
Weight	0.340Kg		
Scale	C		
Accuracy	±1℃		
Flammability	UL 94V-0		

Accessories

Part Number	Description
FMH 2500	FMH - 2500 - Flush Mount panel- Horizontal
ETN 2500	ETN - 2500 - Surface Mount panel
FMT 2500	FMH - 2500 - Flush Mount panel- Vertical
IRP 2500	Receiver panel for remote control
RT03	IR remote control
TS01	Temperature Sensor - 80 cm Cable
RS01	Temperature Sensor into decorative box
RS02	Average Temperature Sensor into decorative box
RS03	Room Temperature Sensor ±3℃
WP4	Decorative back plate for ETN panel






meitav-tec

Configurations



Main Board

PS2500 - Main Controller
All-IN-ONE[™] for Fan-Coils applications
with Native BACnet Protocol

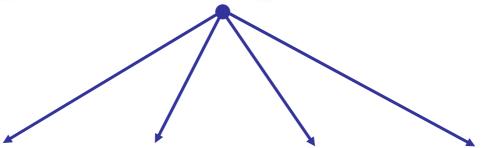

Control Panels / Accessories



ETN-X500 – Wall mount thermostat with built in temperature sensor* and LCD display.



FMH-X500 – Flush mount thermostat with built in temperature sensor* and LCD display.



IRP-X500 - Receiver Panel with built in temperature sensor* + IR Remote Control unit.



TS01 – Return air sensor ONLYconnected to main board. NO wall panel needed.

*The temperature may be sensed either through the wall panel's built in temperature sensor **OR** through the return air sensor connected to the main board (DIP Switch selectable).





Sample Object List

IMPORTANT: The following Object List is for example purposes ONLY and will vary according to each specific project.

N	Object	Description	Value	Default	Remarks
1	Analog Input #0	T1- Return air sensor	7℃32℃		-
2	Analog Input #1	T2- Discharge sensor	-65℃…150℃		-
3	Analog Input #2	T3- Indoor coil sensor	-65℃200℃		-
4	Analog Value #0	Set Point	10℃30℃		-
5	Analog Value #1	0= Fan Only, 1= Cool, 2= Heat, 3= Auto Change	Mode	Cool	Auto Change- ONLY for 4-pipe systems Fan Only- selectable option (shorting terminals F5,0)
6	Analog Value #2	0= Auto Speed, 1= Low, 2= Med, 3=High	Fan	Low	-
7	Analog Value #3	Dead zone Cool	0.5℃5.0℃	1.0°C	Only for Auto Change
8	Analog Value #4	Dead zone Heat	0.5℃…5.0℃	1.0°C	Only for Auto Change
9	Analog Value #5	Offset T1 ambient	-6.0℃6.0℃	0.0°C	For display on thermostat
10	Analog Value #7	Set Point Limit Low	10℃30℃	10°C	Does not limit display
11	Analog Value #8	Set Point Limit High	10℃30℃	30°C	Does not limit display
12	Binary Output #0	Thermostat On / Off	Off /On		-
13	Binary Input #0	Cooling	Off /On		Indication
14	Binary Input #1	Heating	Off /On		Indication
15	Binary Input #2	Fan: Speed Low	Off /On		Indication
16	Binary Input #3	Fan: Speed Medium	Off /On		Indication
17	Binary Input #4	Fan: Speed High	Off /On		Indication
18	Binary Input #5	Fault Input- F4 (all units OFF)	Off /On		Indication
19	Binary Input #6	IR Input- 12/IR	Off /On		Indication
20	Binary Input #7	Fault Input- F6 (indication only in protocol)	Off /On		Indication